ENCLOSURE 02 / 99 DD+DIS034.99E *1TLKTM1* 1 Piece 1 TLKTM MA 1	ADCC ID-Tablet Type 4406 / 841 Reset / Power On LED for PRID

HOME

Installation of

EB+44060655 Reset / Power On LED

for PRID

Type
4406 / 841

1 Scope of delivery

EB+44060655 LED / Reset switch with cables

2 Fitting instructions

- Assemble the reset / power-on LED as shown beside

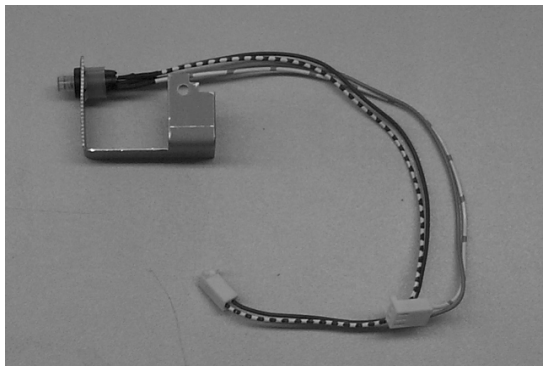

- Disconnect the ID – Tablet from the mains.
- Loosen the screws of the cover of the ID tablet and remove the metal panels.

printed in Germany

AGFA

- Lift the cover off

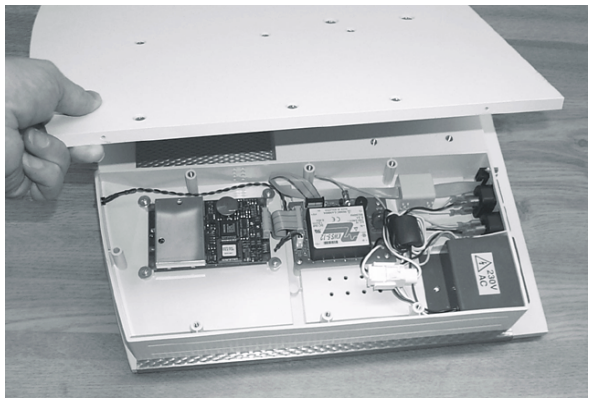

- Loosen the screw (1)
- Insert the assembled reset/power-on LED (2)
- Thread the cable below the holding bracket (3)
- Fix the assembled reset/power-on LED by means of the screw (1)
- Plug the reset/power-on LED into the Power Supply Board (P2) and (P5)
  (2-pin plug into P2, 3-pin plug into P5)

  Note: Older Power Supply PCBs do not have P5. Just leave the cable unconnected.

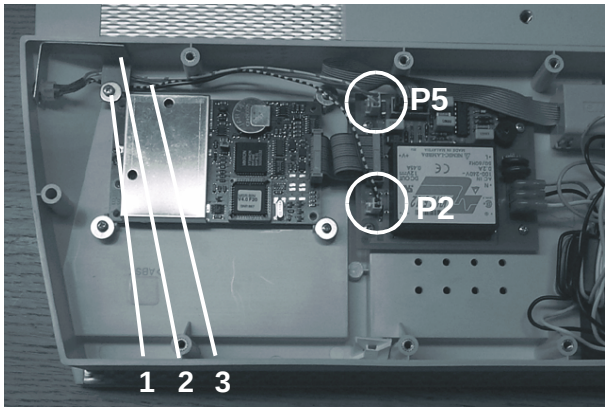

1. Make sure that the cables of the reset/power on LED are plugged into the Power Supply Board in the way shown beside.

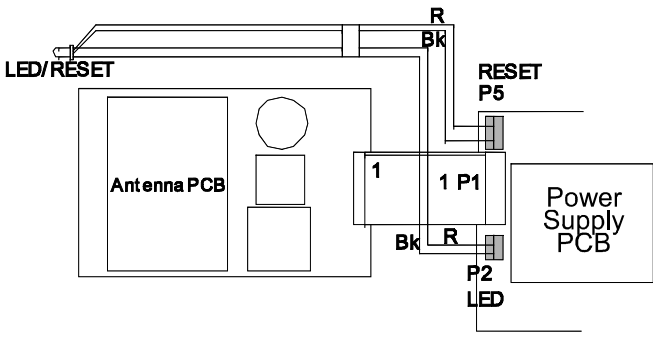

With new Power Supply PCB

2. Older ID-tablets do not have a **P5** connector on the Power Supply PCB. Therefore the reset function is **not** available with those machines.

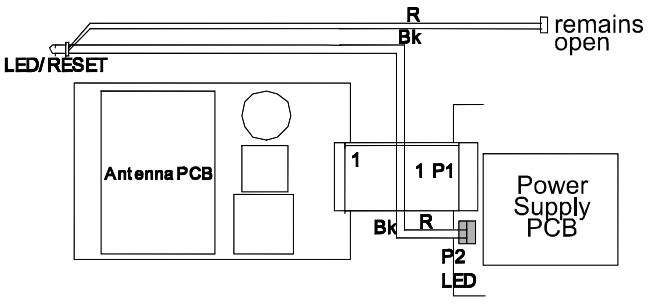

With old Power Supply PCB